

10" LCD Room Monitor Wall Detachment Guide



During the removal process, Extraction Apparatus provided with the device should be used.

10" Monitor wall detachment process

1




10" Monitor wall detachment process

2

10" monitor is provided with 2 extraction apparatus


There are 2 bead seats on the top of the monitor

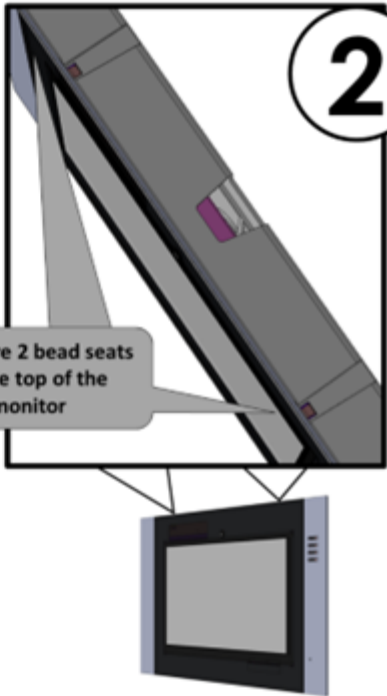

10" Monitor wall detachment process

3


Place extraction apparatus to slots on the top of the monitor as shown on the figure

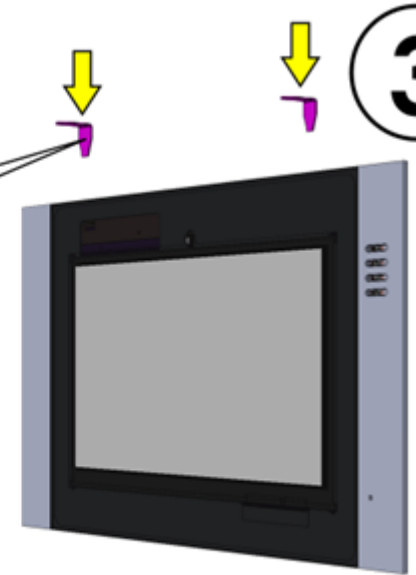

10" Monitor wall detachment process

4


Apply soft pressure to extraction apparatus

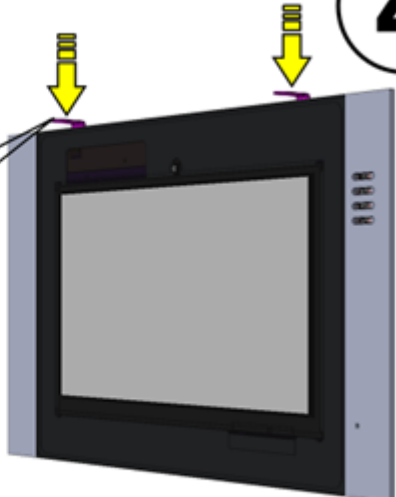

10" Monitor wall detachment process

5

While applying pressure to extraction apparatus, pull apparatus to yourself. Monitor will be detached.

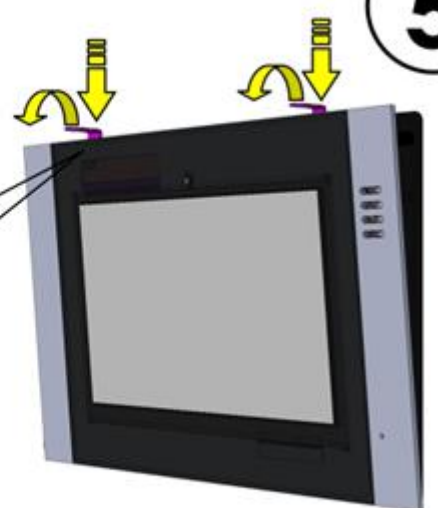


10" LCD Room Monitor Wall Detachment Guide




It is important to use Installation Styrofoam according to instructions, in order to place Blind Casing in the wall properly during Flush Mount Installation process

BLIND CASING INSTALLATION SHOULD BE COMPLETED AFTER PLASTER COATING IS FINISHED AND BEFORE WALL PAINTING IS STARTED

Installation Styrofoam

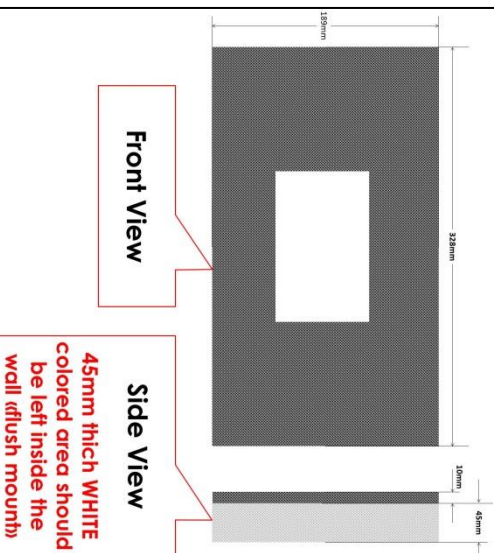


1 Placing Installation Styrofoam on the wall

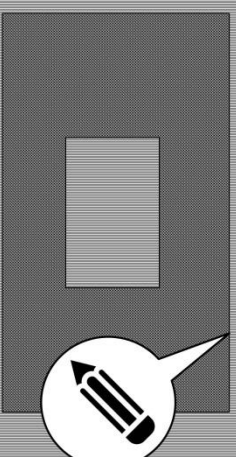


Place Installation Styrofoam on the selected location and mark its frame with a pen

2 Placing Installation Styrofoam on the wall

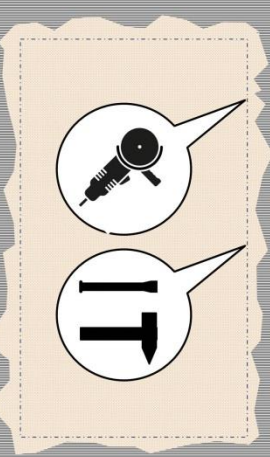


Break marked area with 45-50 mm depth

3 Placing Installation Styrofoam on the wall

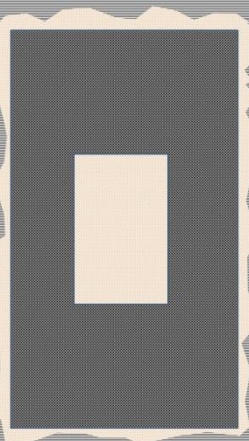


Place Installation Styrofoam. Styrofoam's 45mm white area should be under plaster.

4 Placing Installation Styrofoam on the wall

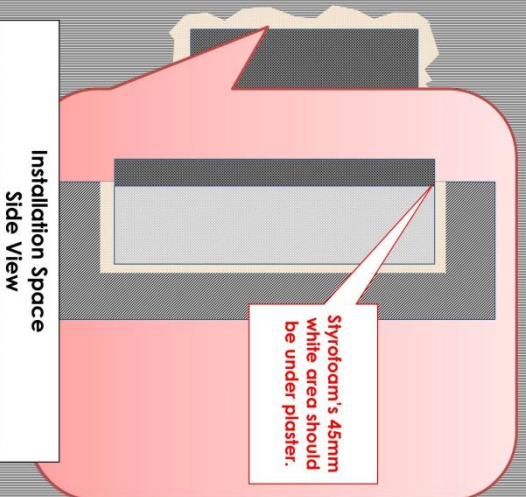


7 Removing Installation Styrofoam from the wall

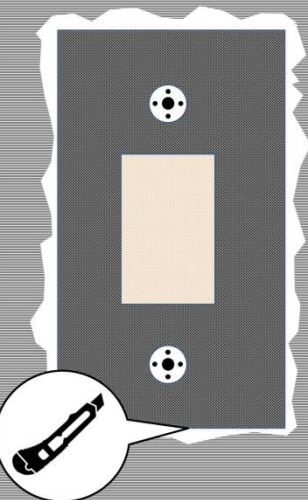


Remove Styrofoam form when plaster is frozen. If there are sticky edges, remove remaining Styrofoam from the wall with help from a

8 Placing Blind Casing to the wall

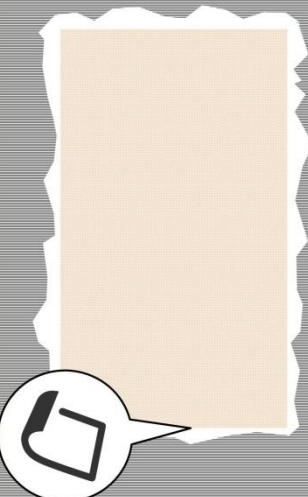


Clean the edges with sandpaper if needed

5 Placing Installation Styrofoam on the wall

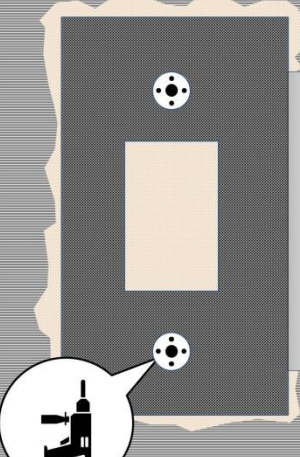


After balancing Styrofoam with water gage, fix with 2 wall plugs.

9 Placing Blind Casing to the wall

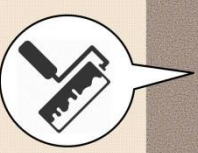


Wall painting should be completed before Blind Casing installation

6 Placing Installation Styrofoam on the wall

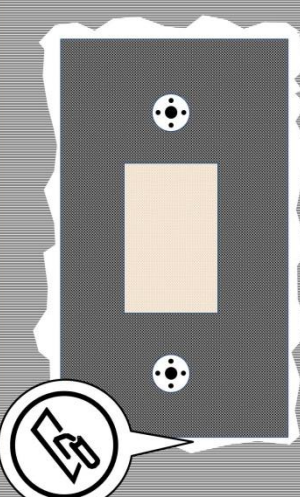

Fill all space between Styrofoam and wall with gypsum plaster.

10 Placing Blind Casing to the wall

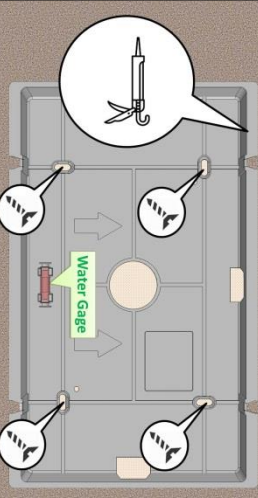

After balancing Blind Casing with water gage, fix it with 4 wall plugs or SILICON.

10" Monitor wall detachment process

